LifeFitness

STEPPER 95SE

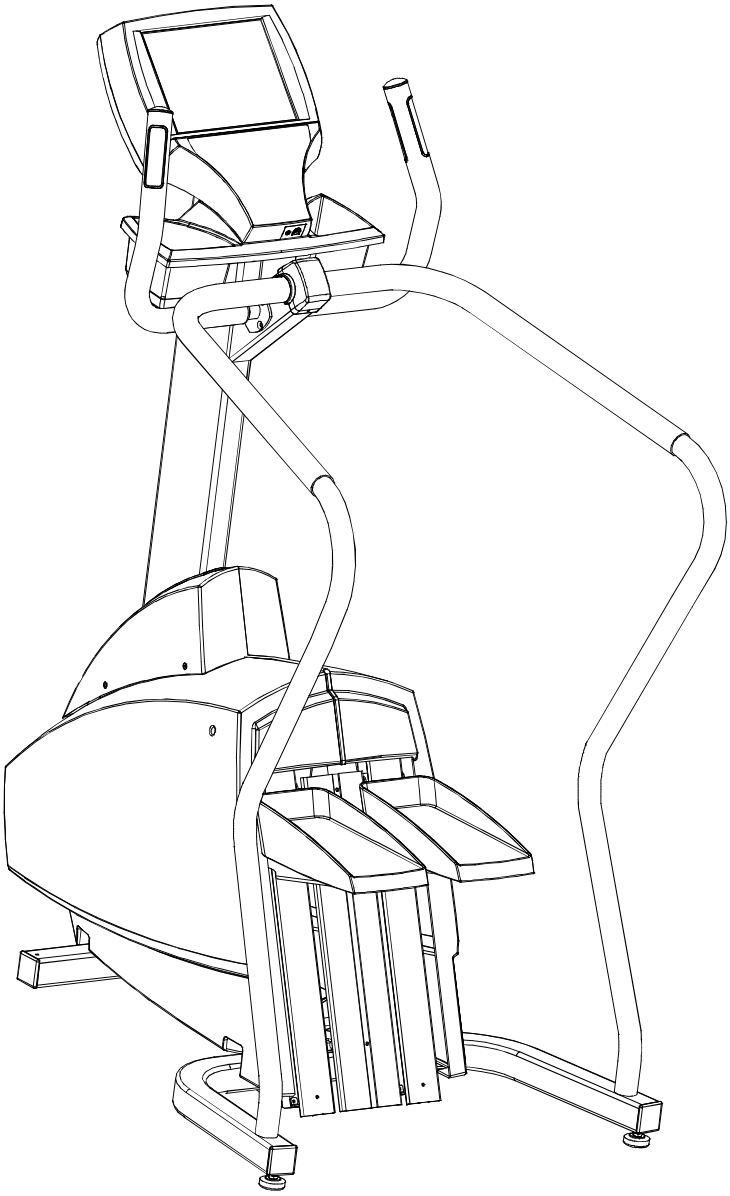

Customer Support Services
PARTS MANUAL

STEPPER 95SE

Notes:

Manual/Video	Part Number
Operation Manual	M051-00K20-A387
Service Manual	M051-00K47-A013
Hardware Bag	AK47-00106-0000
Parts Bag	AK47-00123-0000
POWER SUPPLY 12V, 4.5A Without Line Cord	118E-00001-0161
LINE CORD, DOM. 10A 125V	0017-00003-0704
LINE CORD, CON. 10A 250V	0017-00003-0691
LINE CORD, 10A U.K.	0017-00003-0889
LINE CORD, AUSTRALIA	0017-00003-0918

STEPPER 95SE

Contents

PAGE

CONSOLE 4

FRAME COMPONENTS 5

SHROUDS 6

PEDAL ASSEMBLY 7

MAIN DRIVE PULLEY AND CLUTCH 8

LEFT CLUTCH ASSEMBLY 9

CROSSOVER PULLEY ASSEMBLY 10

ALTERNATOR ASSEMBLY 11

GUIDE ROLLERS 12

PCB AND RESISTOR 13

POLAR RECEIVER ASSEMBLY 14

CABLE 15

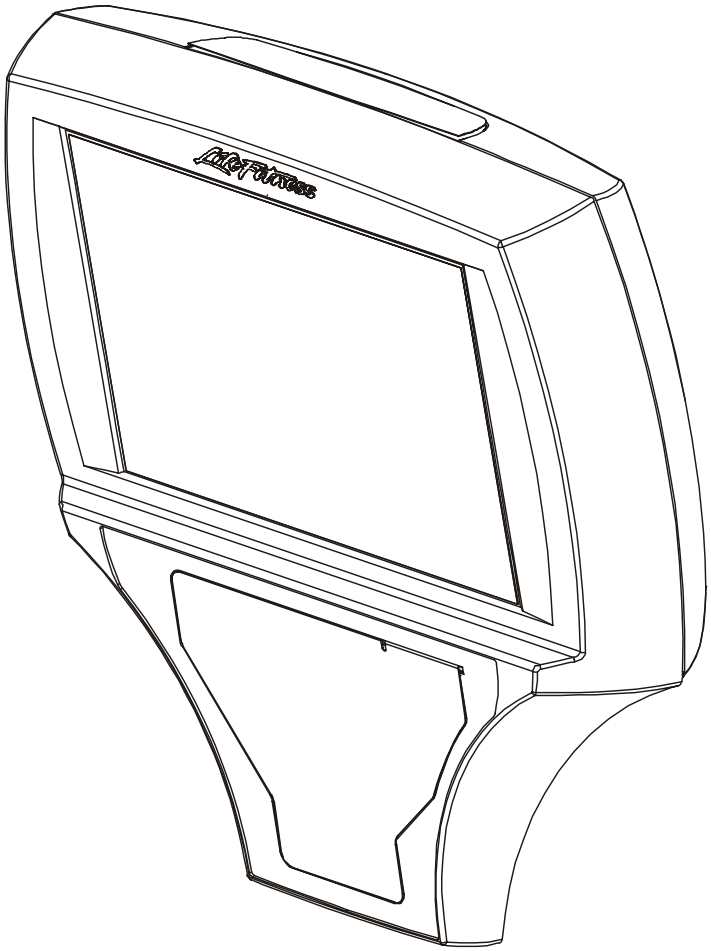

PART NUMBER	DESCRIPTION
GK47-00002-0005	SERV KIT LCD CONS NTSC ENG
GK47-00002-0006	SERV KIT LCD CONS NTSC SPN
GK47-00002-0007	SERV KIT LCD CONS NTSC JAP
GK47-00002-0008	SERV KIT LCD CONS NTSC FRN
GK47-00002-0009	SERV KIT LCD CONS PAL ENG
GK47-00002-0010	SERV KIT LCD CONS PAL GER
GK47-00002-0011	SERV KIT LCD CONS PAL SPN
GK47-00002-0012	SERV KIT LCD CONS PAL FRN
GK47-00002-0013	SERV KIT LCD CONS PAL ITL
GK47-00002-0014	SERV KIT LCD CONS PAL DUT
GK47-00002-0015	SERV KIT LCD CONS PAL POR

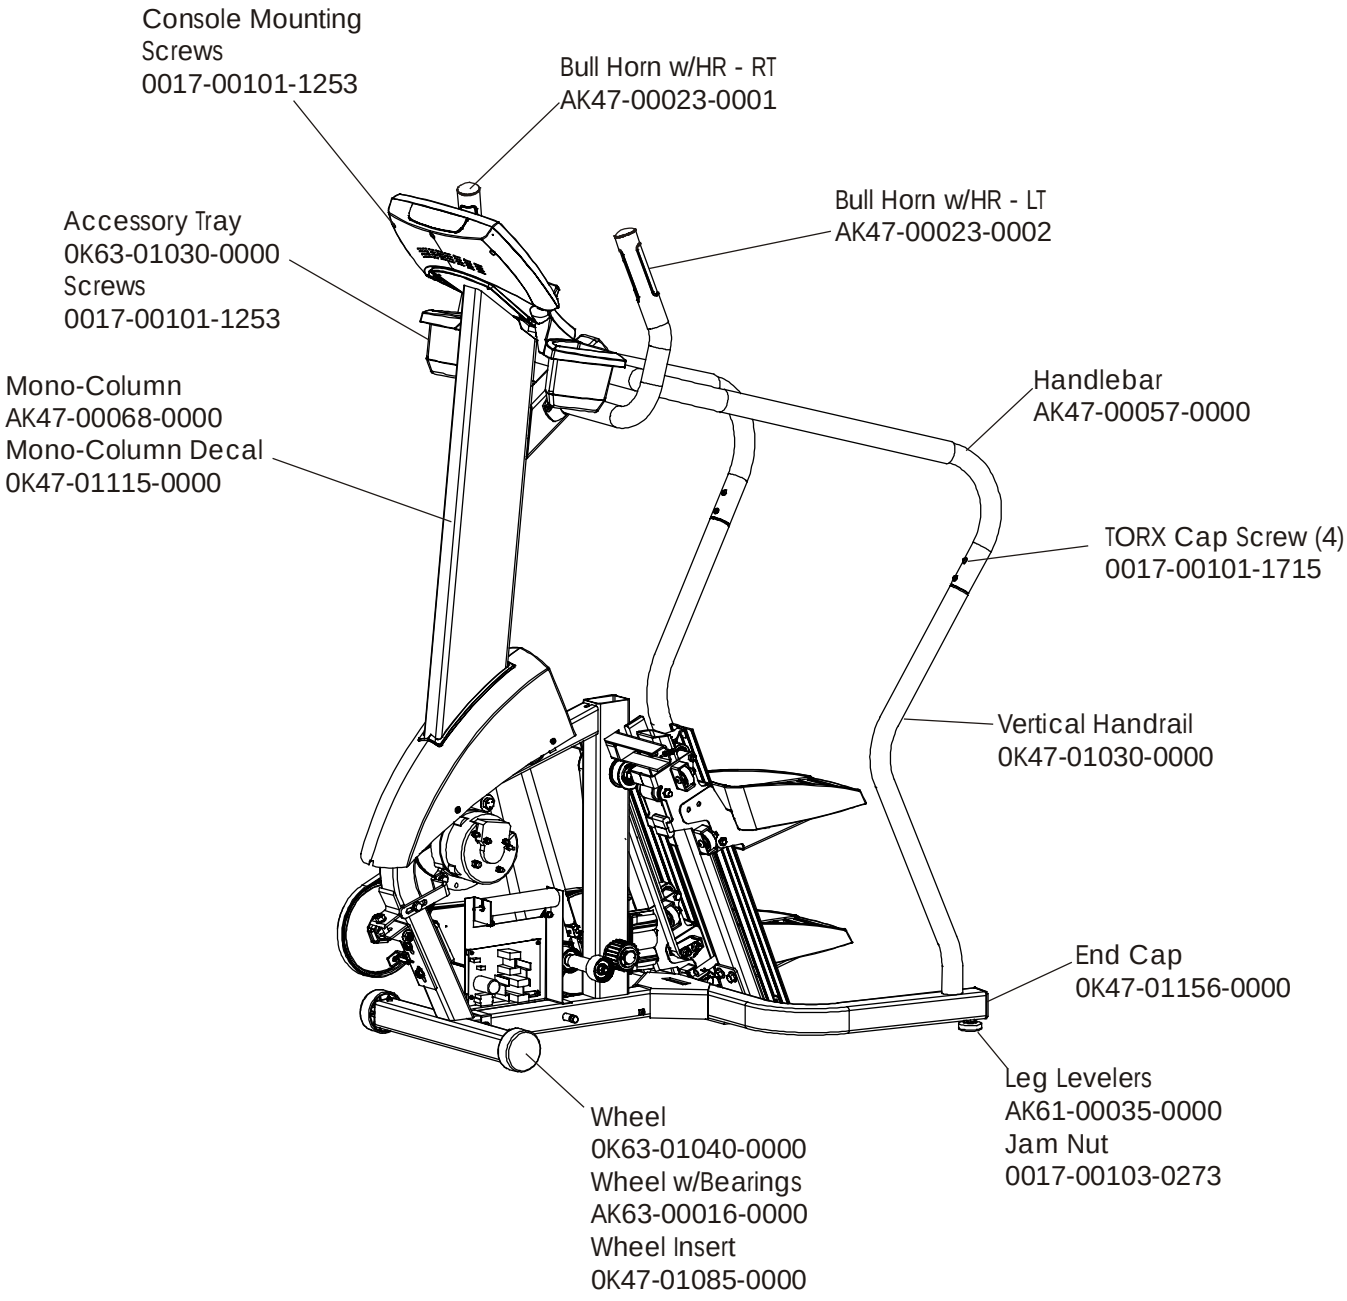
Console Mounting
Screws
0017-00101-1253
Bull Horn w/HR - RT
AK47-00023-0001
Bull Horn w/HR - LT
AK47-00023-0002
Accessory Tray
0K63-01030-0000
Screws
0017-00101-1253
Mono-Column
AK47-00068-0000
Mono-Column Decal
0K47-01115-0000
Handlebar
AK47-00057-0000
TORX Cap Screw (4)
0017-00101-1715
Vertical Handrail
0K47-01030-0000
End Cap
0K47-01156-0000
Leg Levelers
AK61-00035-0000
Jam Nut
0017-00103-0273
Wheel
0K63-01040-0000
Wheel w/Bearings
AK63-00016-0000
Wheel Insert
0K47-01085-0000

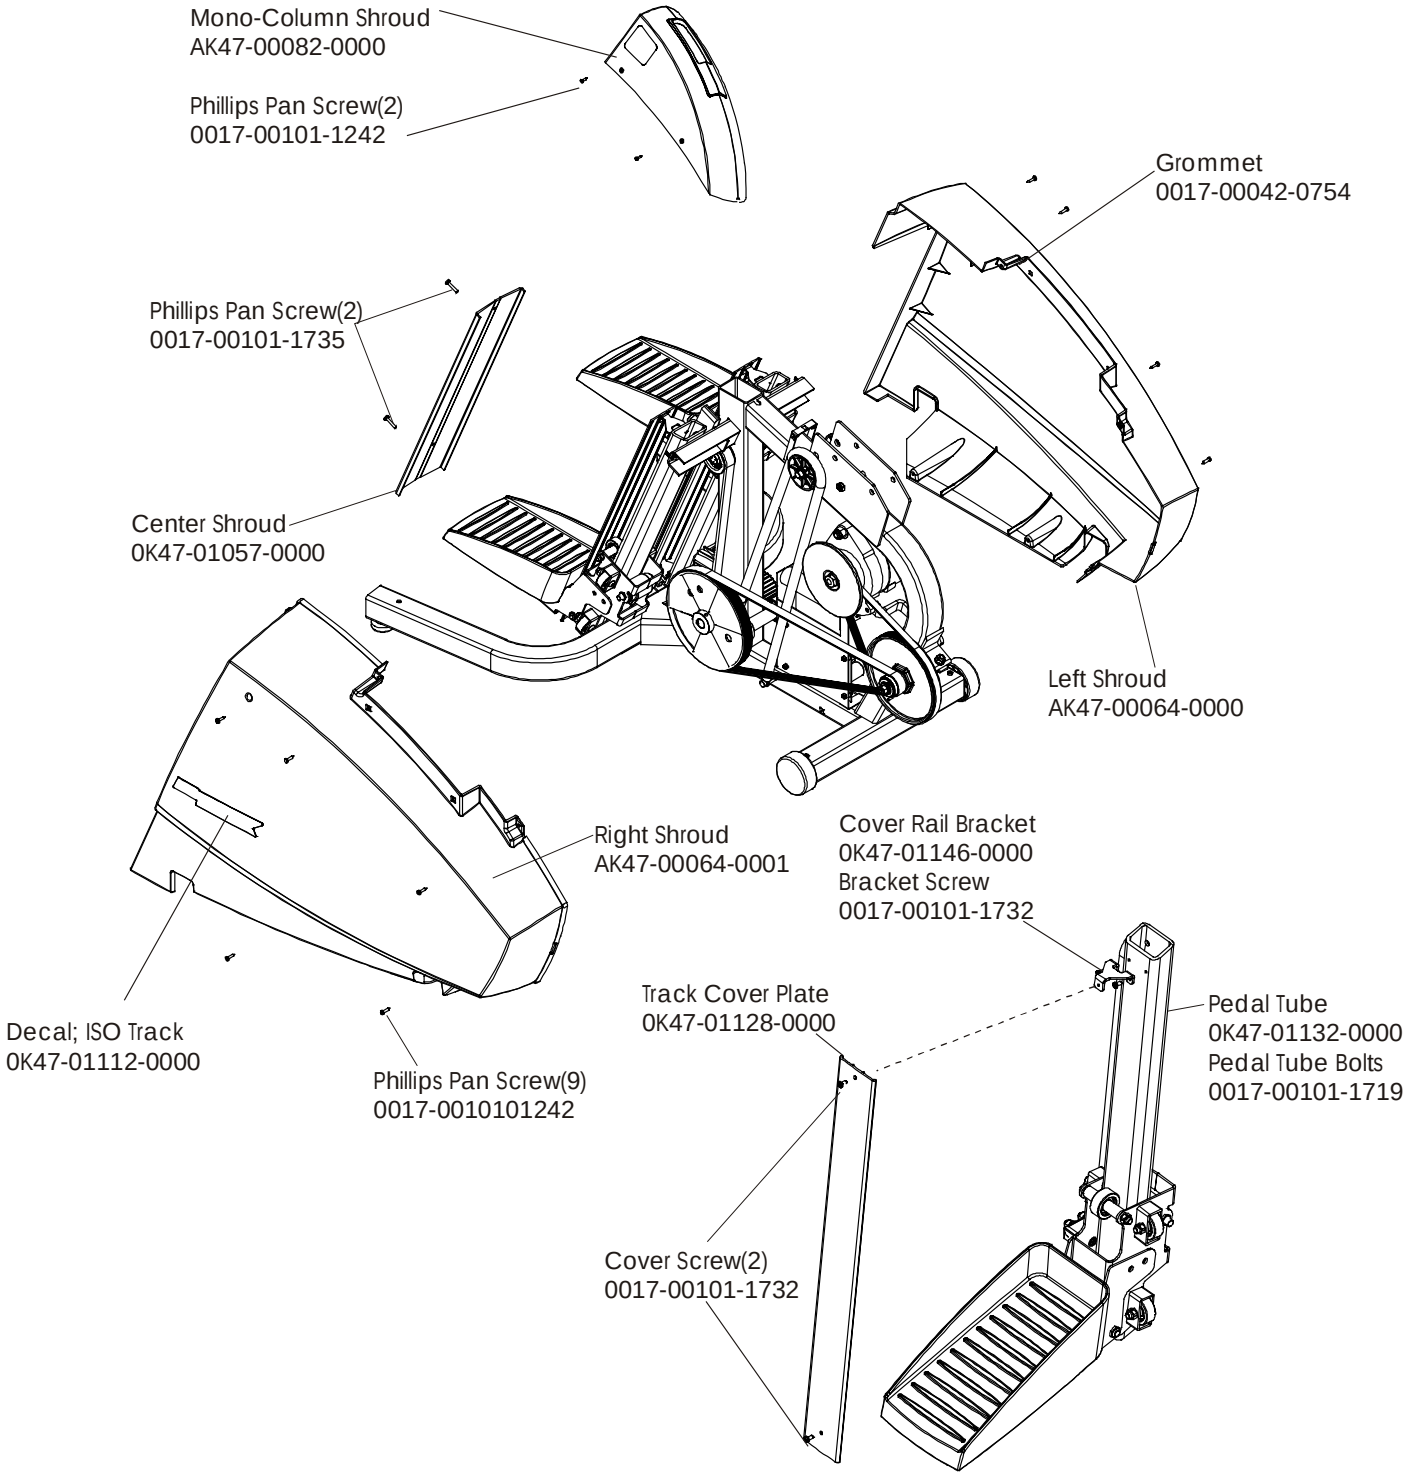
Mono-Column Shroud
AK47-00082-0000
Phillips Pan Screw(2)
0017-00101-1242
Grommet
0017-00042-0754
Phillips Pan Screw(2)
0017-00101-1735
Center Shroud
0K47-01057-0000
Left Shroud
AK47-00064-0000
Right Shroud
AK47-00064-0001
Cover Rail Bracket
0K47-01146-0000
Bracket Screw
0017-00101-1732
Decal; ISO Track
0K47-01112-0000
Phillips Pan Screw(9)
0017-0010101242
Track Cover Plate
0K47-01128-0000
Pedal Tube
0K47-01132-0000
Pedal Tube Bolts
0017-00101-1719
Cover Screw(2)
0017-00101-1732

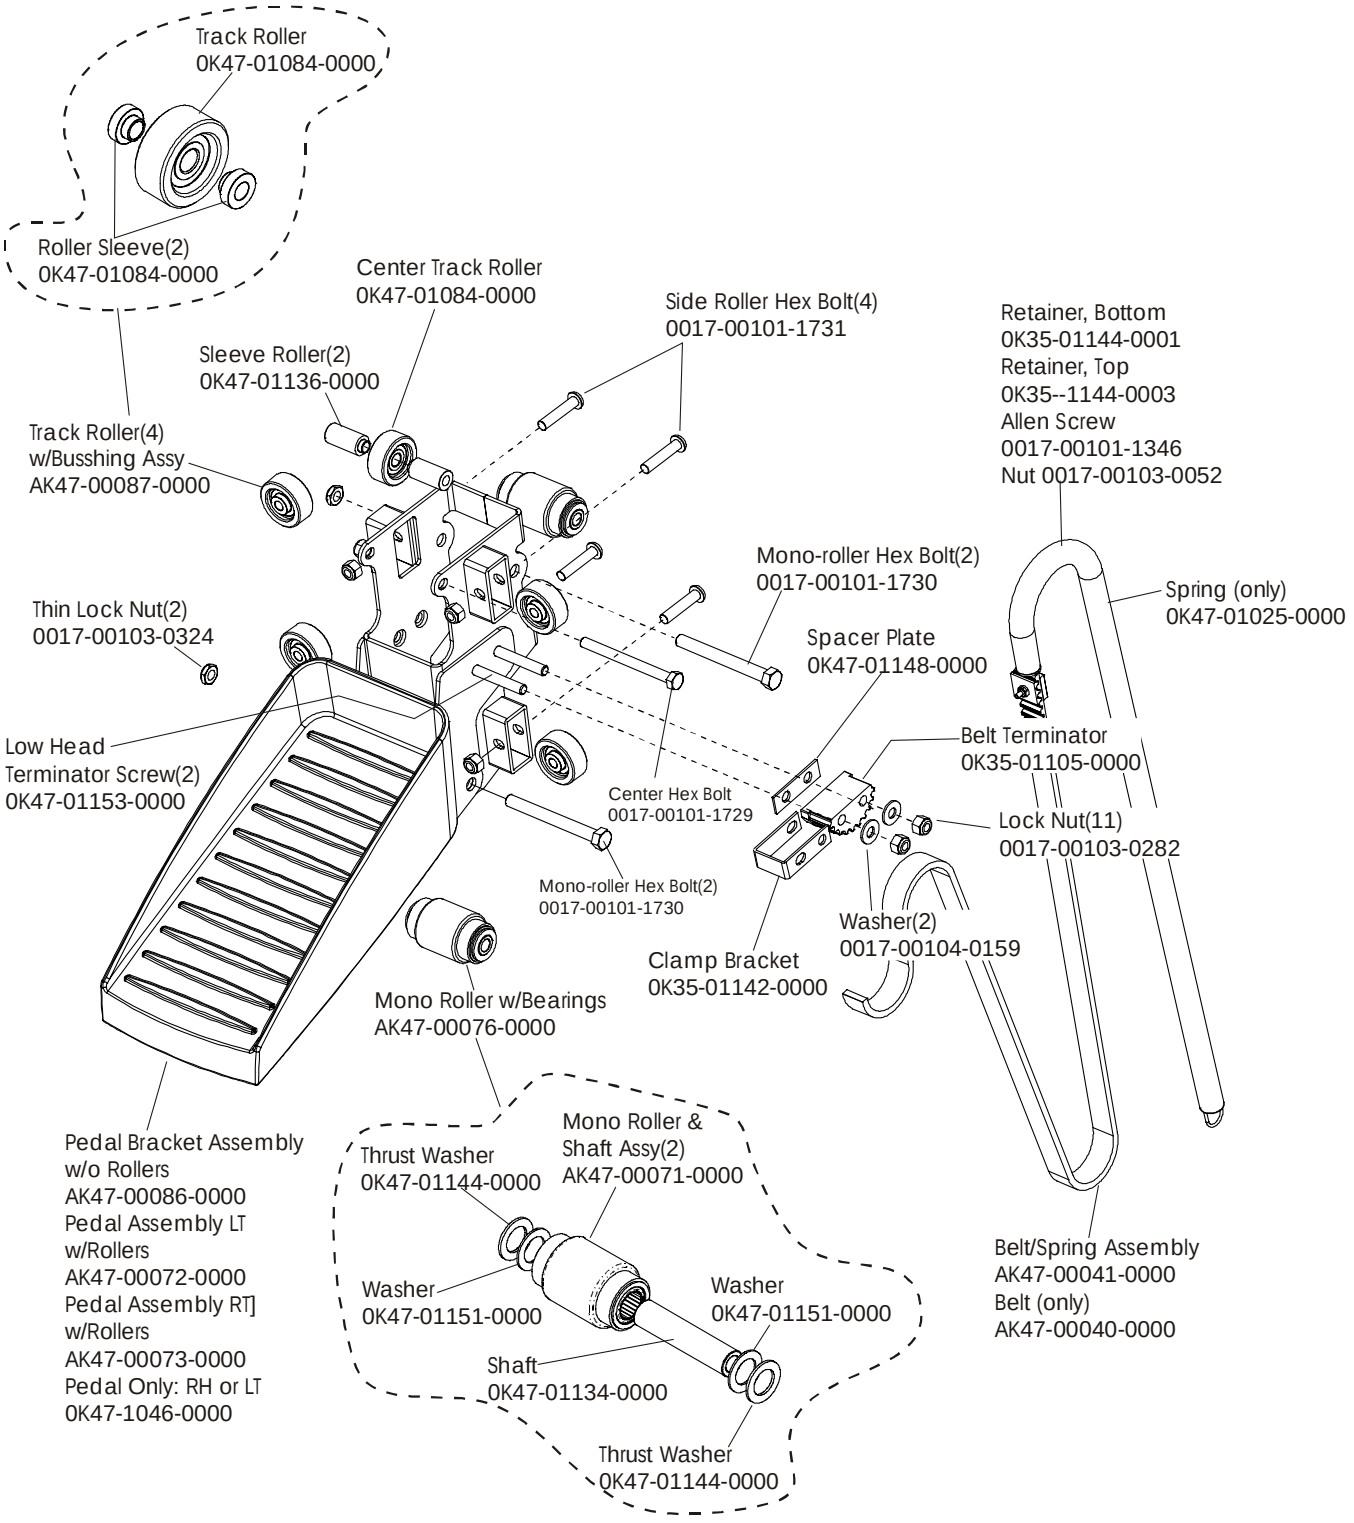
Track Roller
0K47-01084-0000
Roller Sleeve(2)
0K47-01084-0000
Center Track Roller
0K47-01084-0000
Side Roller Hex Bolt(4)
0017-00101-1731
Sleeve Roller(2)
0K47-01136-0000
Retainer, Bottom
0K35-01144-0001
Retainer, Top
0K35--1144-0003
Allen Screw
0017-00101-1346
Nut 0017-00103-0052
Track Roller(4)
w/Busshing Assy
AK47-00087-0000
Mono-roller Hex Bolt(2)
0017-00101-1730
Spring (only)
0K47-01025-0000
Thin Lock Nut(2)
0017-00103-0324
Spacer Plate
0K47-01148-0000
Belt Terminator
0K35-01105-0000
Low Head
Terminator Screw(2)
0K47-01153-0000
Center Hex Bolt
0017-00101-1729
Lock Nut(11)
0017-00103-0282
Mono-roller Hex Bolt(2)
0017-00101-1730
Washer(2)
0017-00104-0159
Clamp Bracket
0K35-01142-0000
Mono Roller w/Bearings
AK47-00076-0000
Pedal Bracket Assembly
w/o Rollers
AK47-00086-0000
Pedal Assembly LT
w/Rollers
AK47-00072-0000
Pedal Assembly RT]
w/Rollers
AK47-00073-0000
Pedal Only: RH or LT
0K47-1046-0000
Thrust Washer
0K47-01144-0000
Mono Roller &
Shaft Assy(2)
AK47-00071-0000
Washer
0K47-01151-0000
Washer
0K47-01151-0000
Shaft
0K47-01134-0000
Thrust Washer
0K47-01144-0000
Belt/Spring Assembly
AK47-00041-0000
Belt (only)
AK47-00040-0000

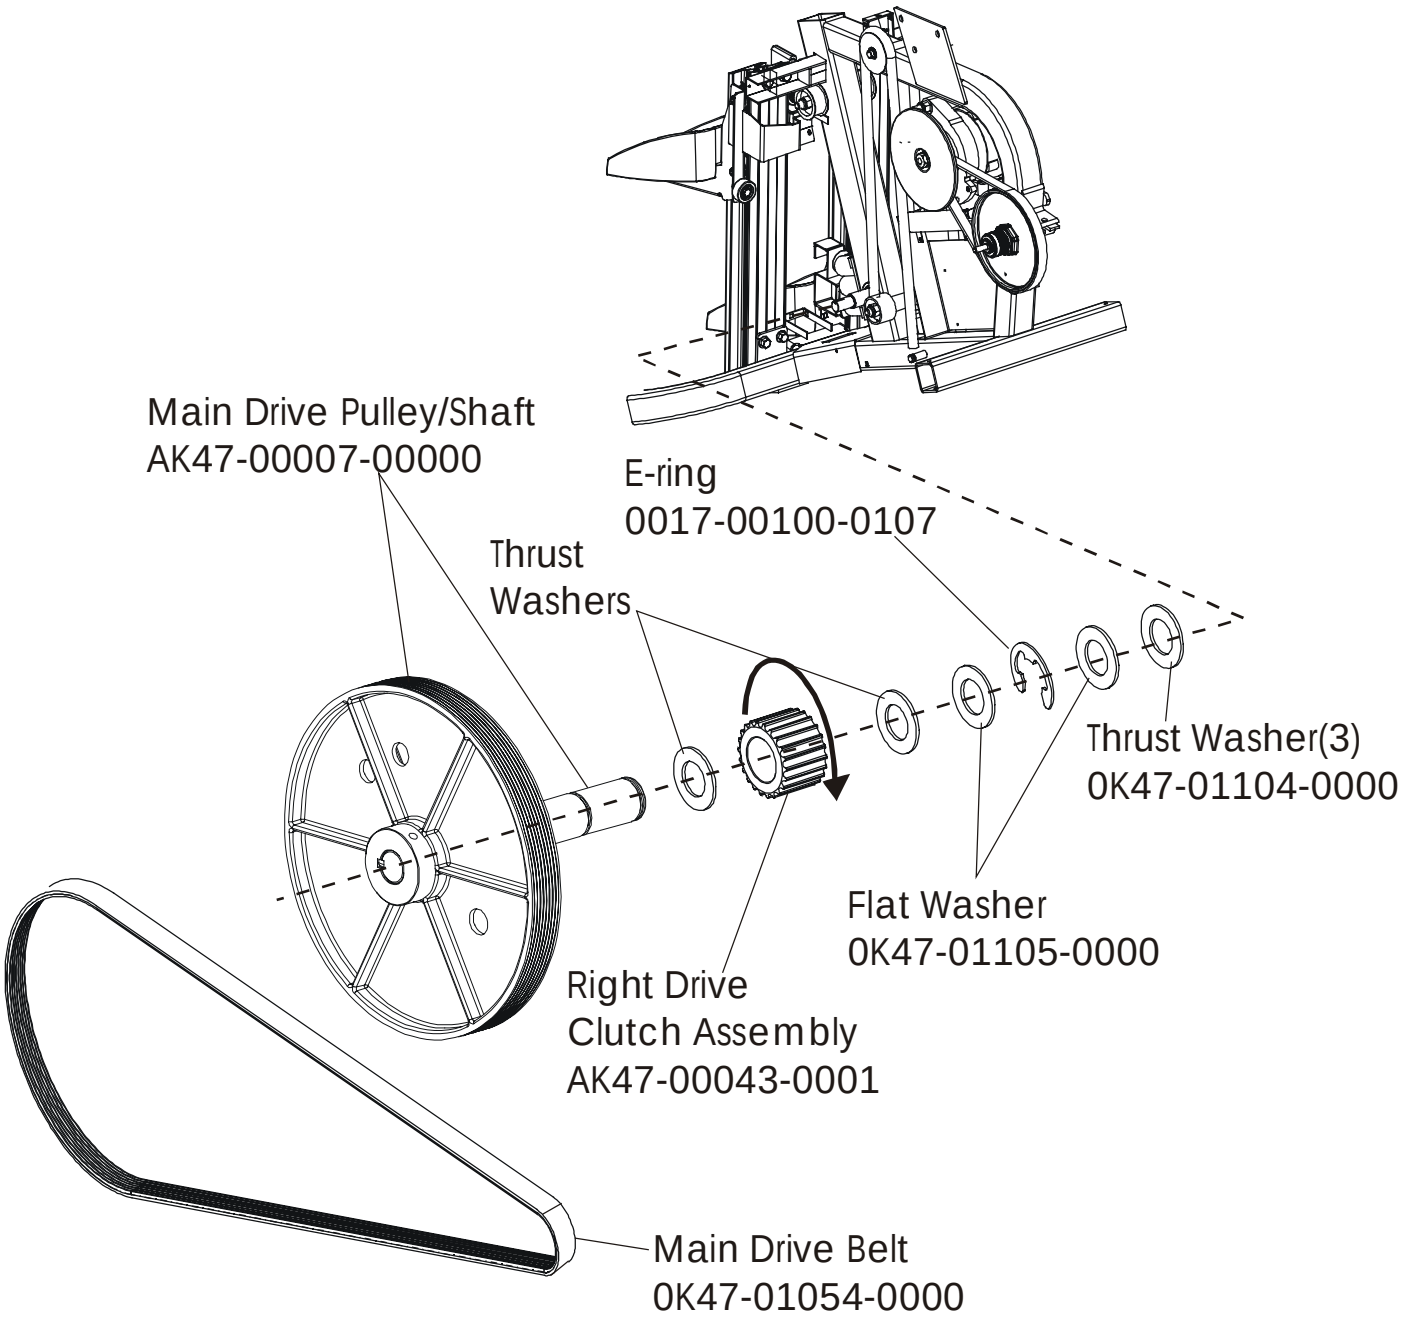
Main Drive Pulley/Shaft
AK47-00007-00000
E-ring
0017-00100-0107
Thrust
Washers
Thrust Washer(3)
0K47-01104-0000
Flat Washer
0K47-01105-0000
Right Drive
Clutch Assembly
AK47-00043-0001
Main Drive Belt
0K47-01054-0000

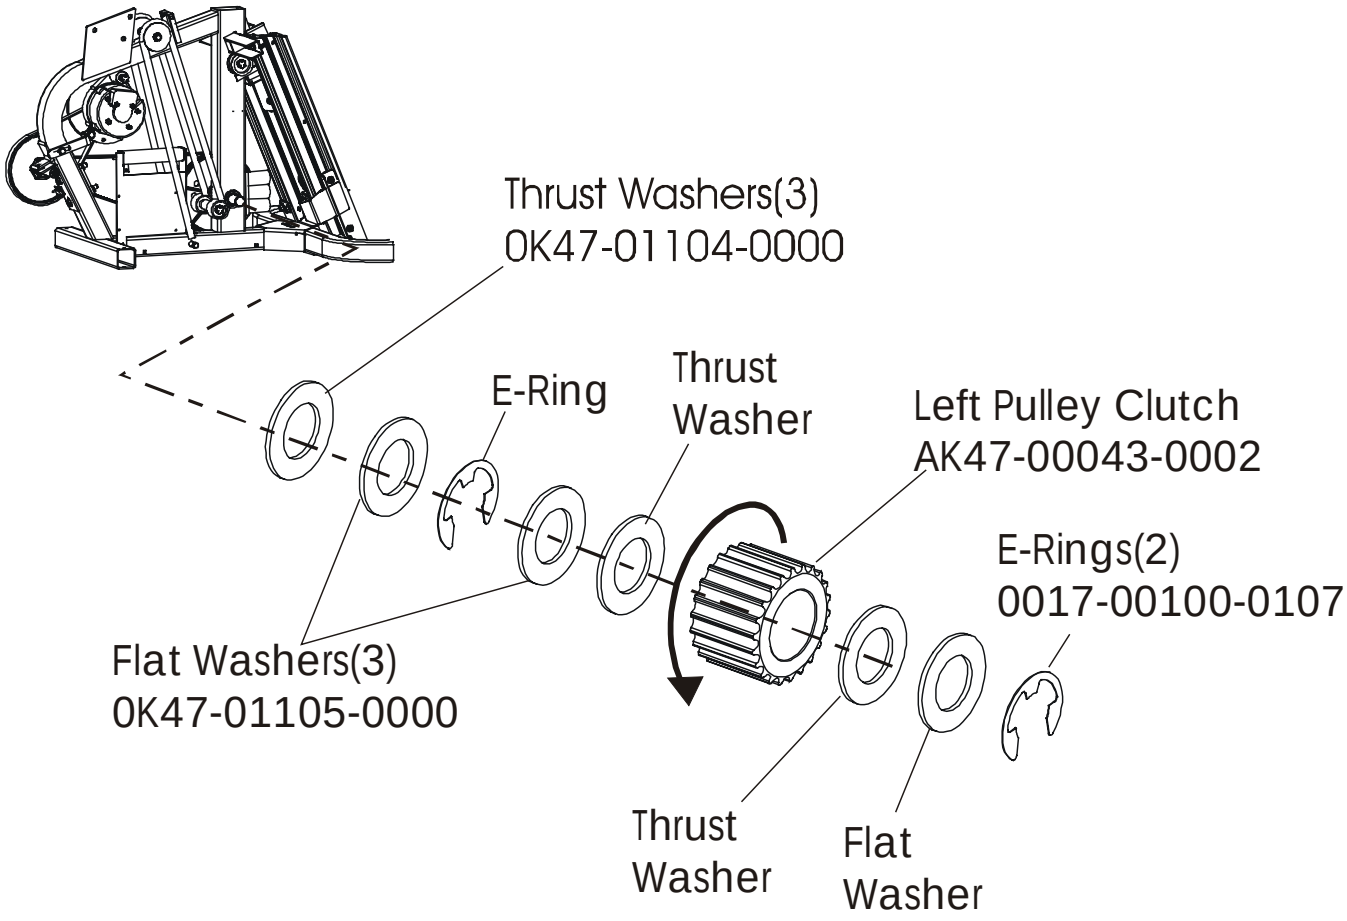
Thrust Washers(3)
0K47-01104-0000
E-Ring
Thrust
Washer
Left Pulley Clutch
AK47-00043-0002
E-Rings(2)
0017-00100-0107
Flat Washers(3)
0K47-01105-0000
Thrust
Washer
Flat
Washer

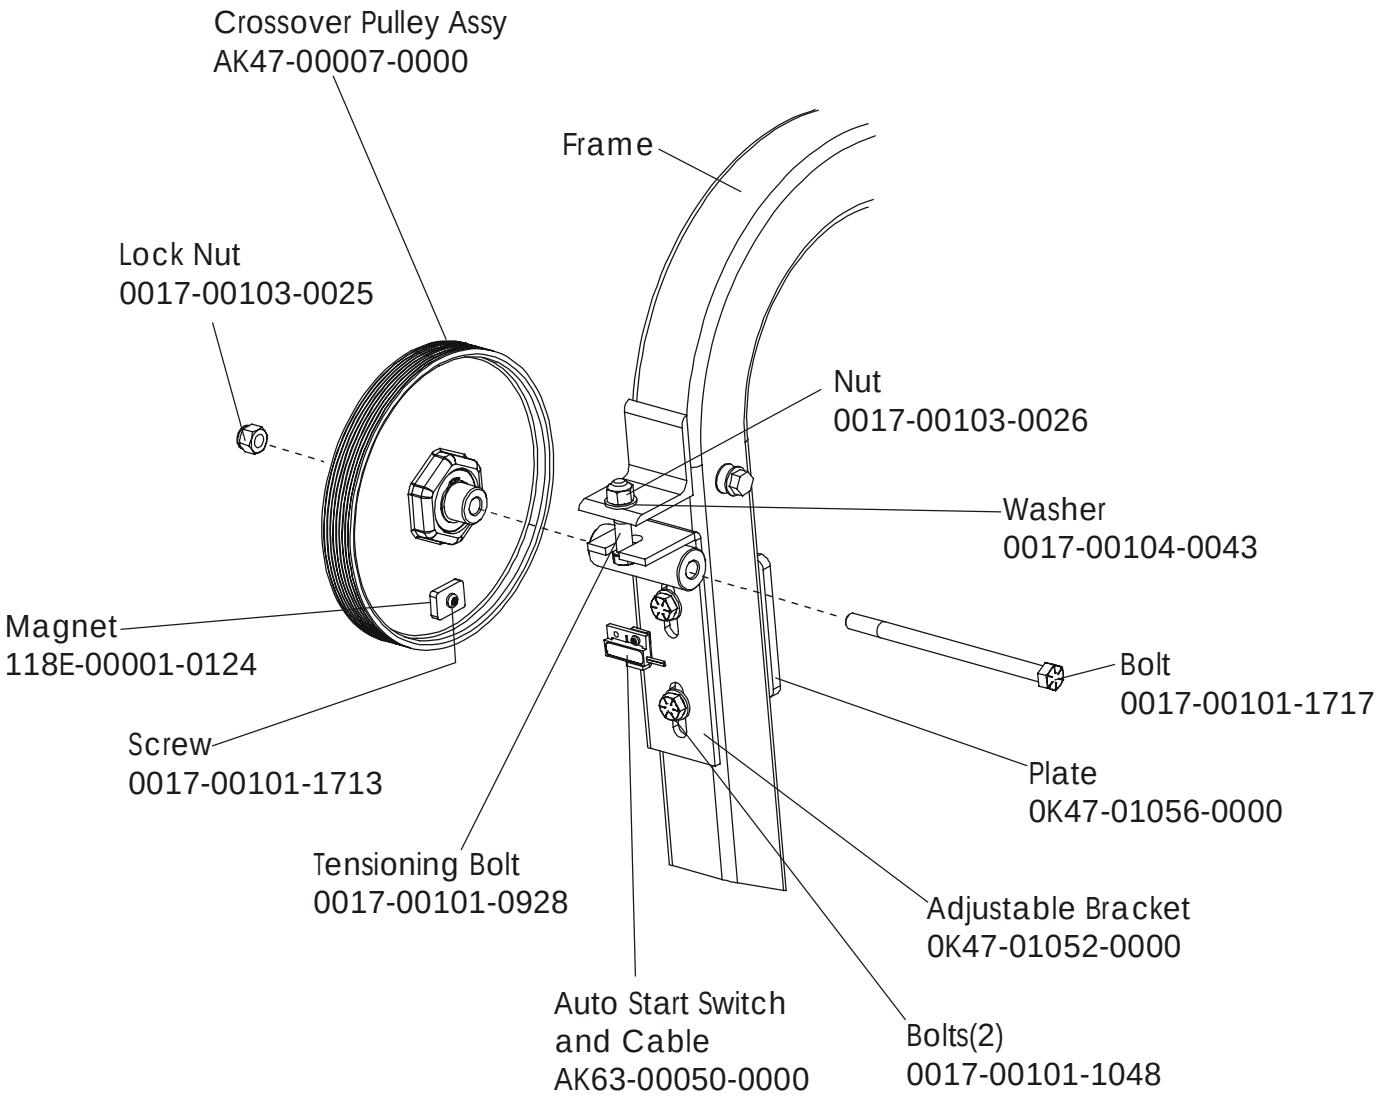
Crossover Pulley Assy
AK47-00007-0000
Frame
Lock Nut
0017-00103-0025
Nut
0017-00103-0026
Washer
0017-00104-0043
Magnet
118E-00001-0124
Bolt
0017-00101-1717
Screw
0017-00101-1713
Plate
0K47-01056-0000
Tensioning Bolt
0017-00101-0928
Adjustable Bracket
0K47-01052-0000
Auto Start Switch
and Cable
AK63-00050-0000
Bolts(2)
0017-00101-1048

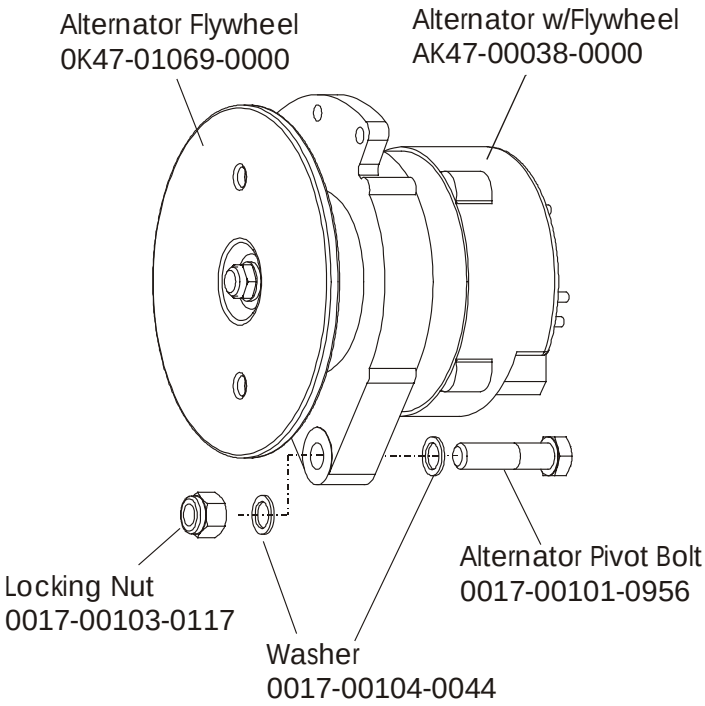
Alternator Flywheel
0K47-01069-0000
Alternator w/Flywheel
AK47-00038-0000
Locking Nut
0017-00103-0117
Washer
0017-00104-0044
Alternator Pivot Bolt
0017-00101-0956

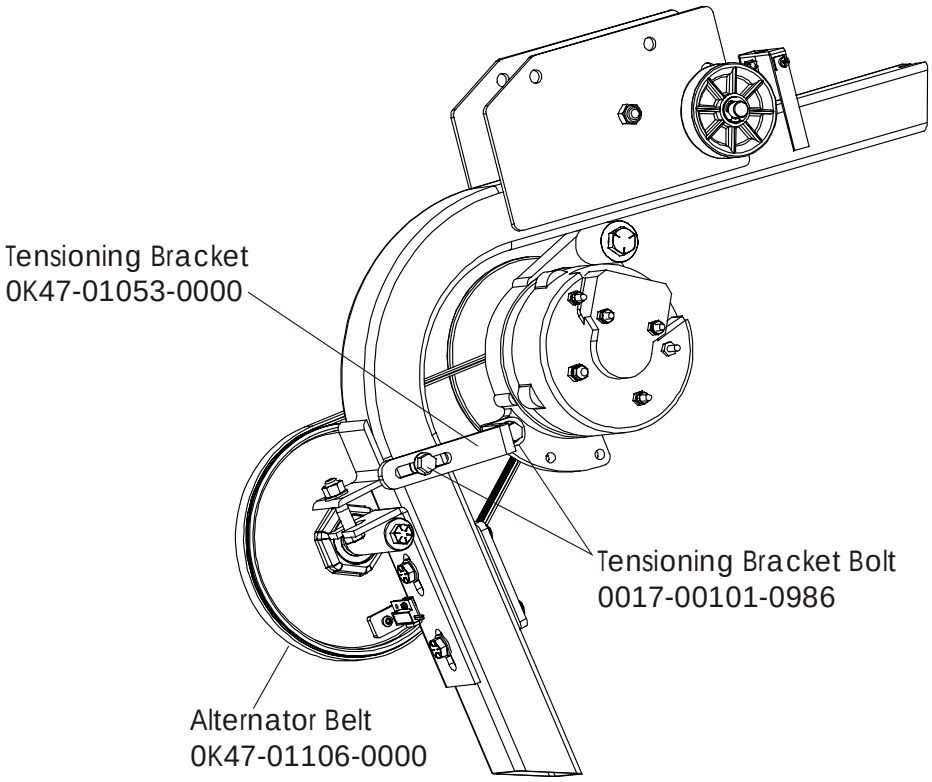
Tensioning Bracket
0K47-01053-0000
Tensioning Bracket Bolt
0017-00101-0986
Alternator Belt
0K47-01106-0000

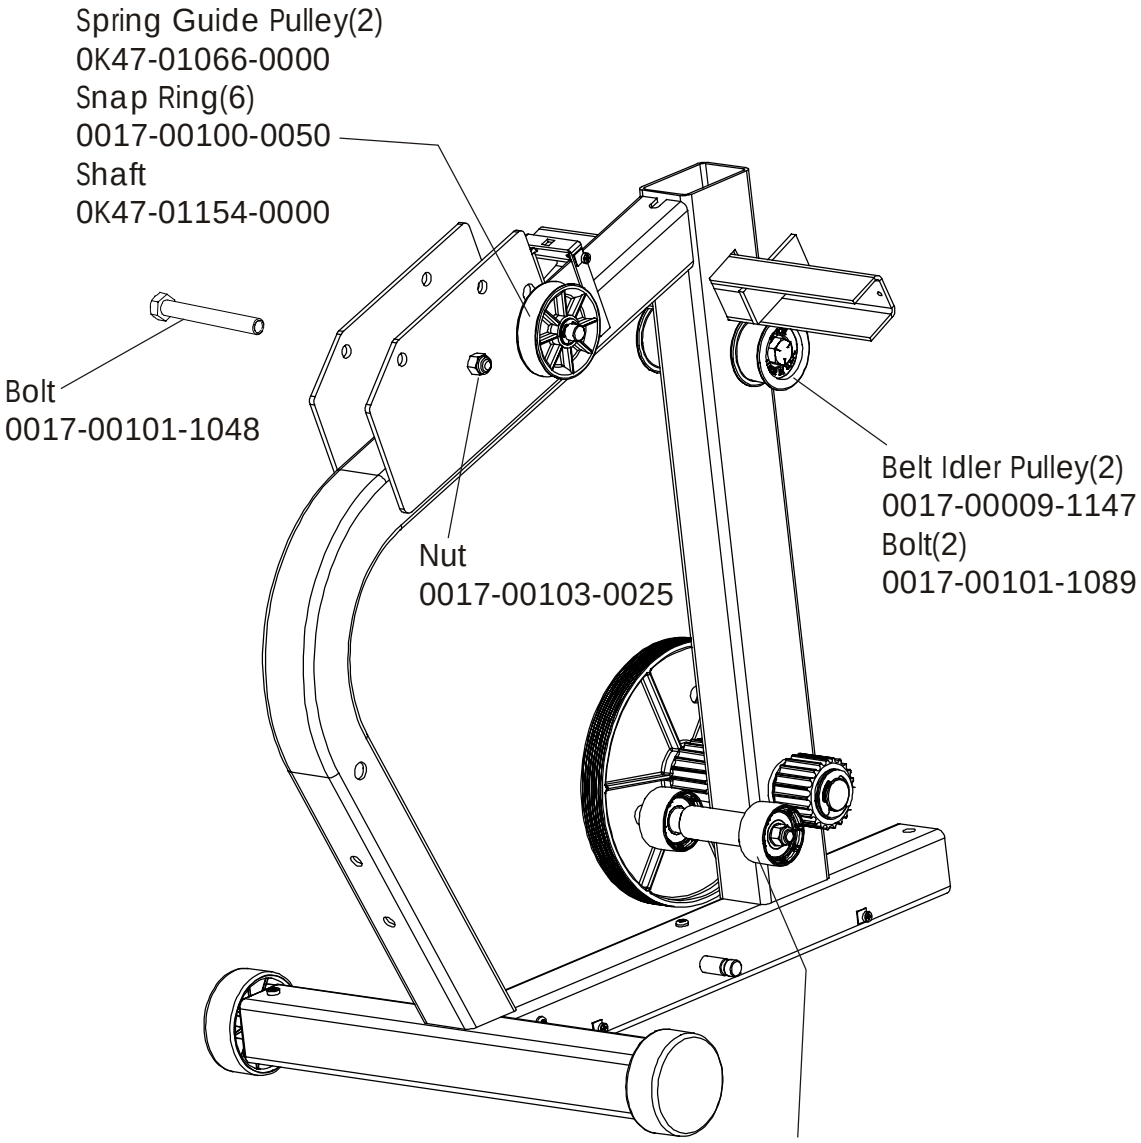
Spring Guide Pulley(2)
0K47-01066-0000
Snap Ring(6)
0017-00100-0050
Shaft
0K47-01154-0000
Bolt
0017-00101-1048
Nut
0017-00103-0025
Belt Idler Pulley(2)
0017-00009-1147
Bolt(2)
0017-00101-1089
Belt Guide Pulley(2)
AK63-00008-0000
Bolt - 0017-00101-1722
Nut - 0017-00143-0025

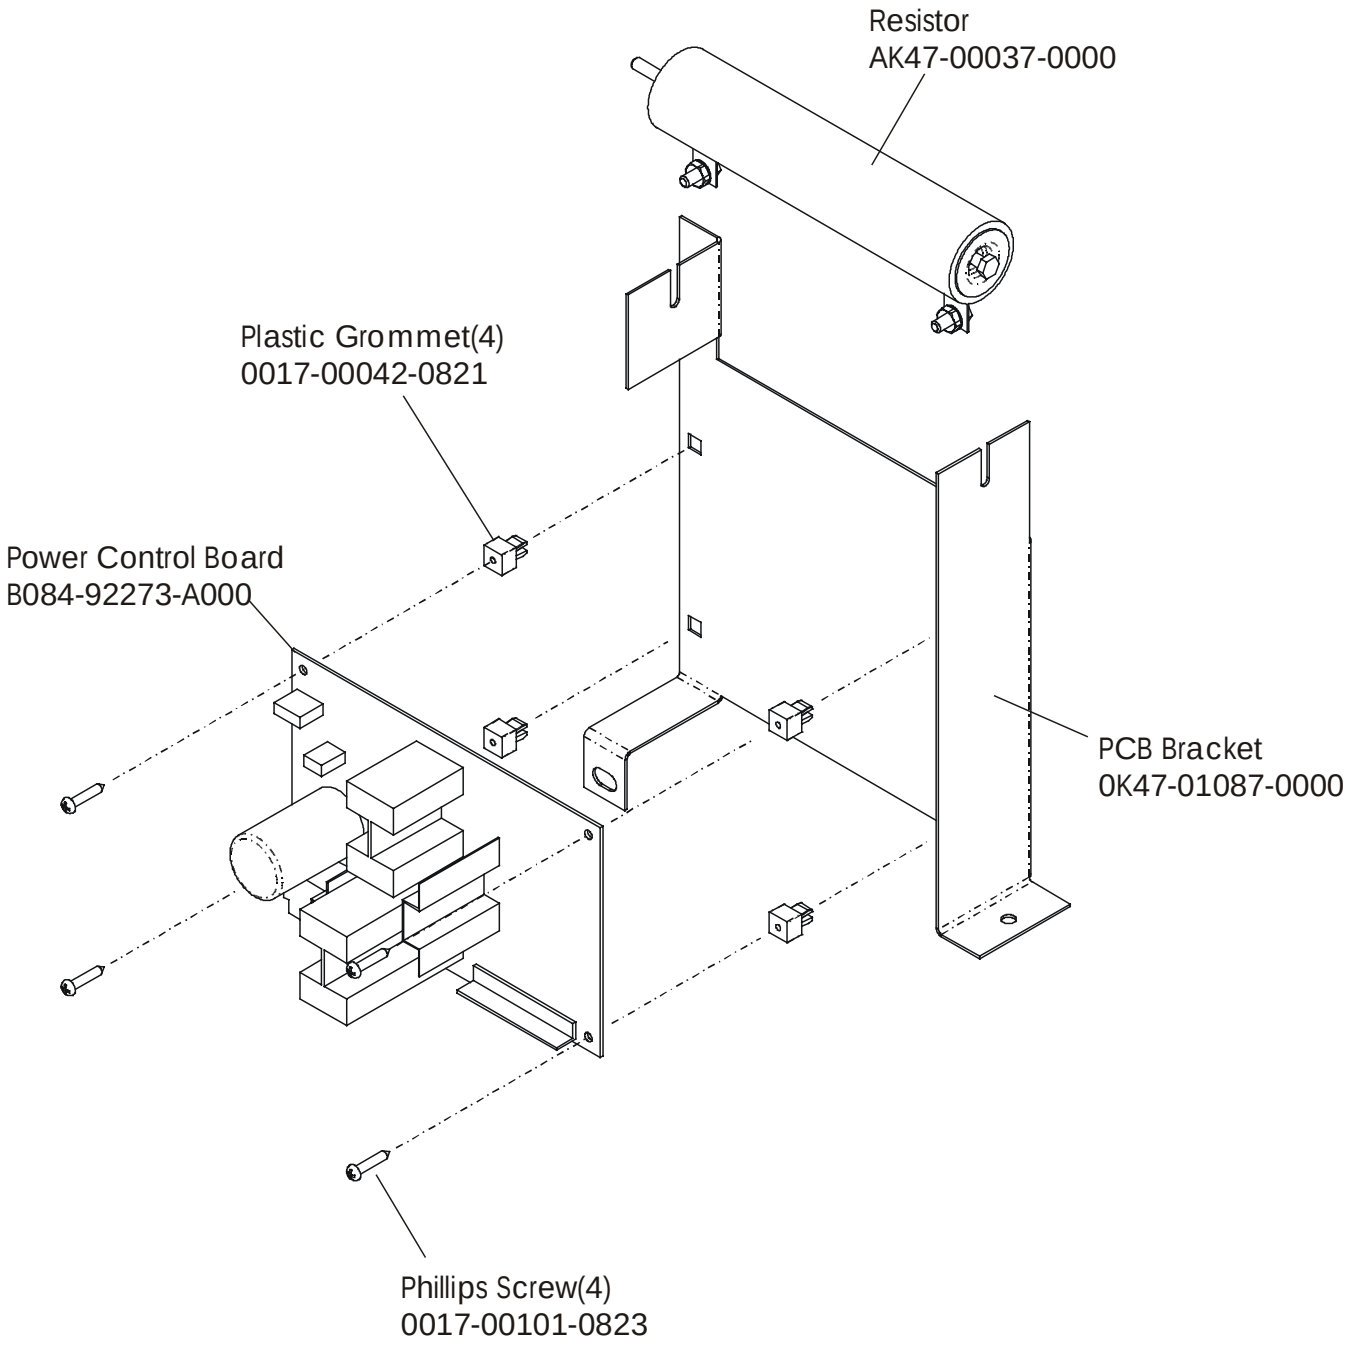
Resistor
AK47-00037-0000
Plastic Grommet(4)
0017-00042-0821
Power Control Board
B084-92273-A000
PCB Bracket
0K47-01087-0000
Phillips Screw(4)
0017-00101-0823

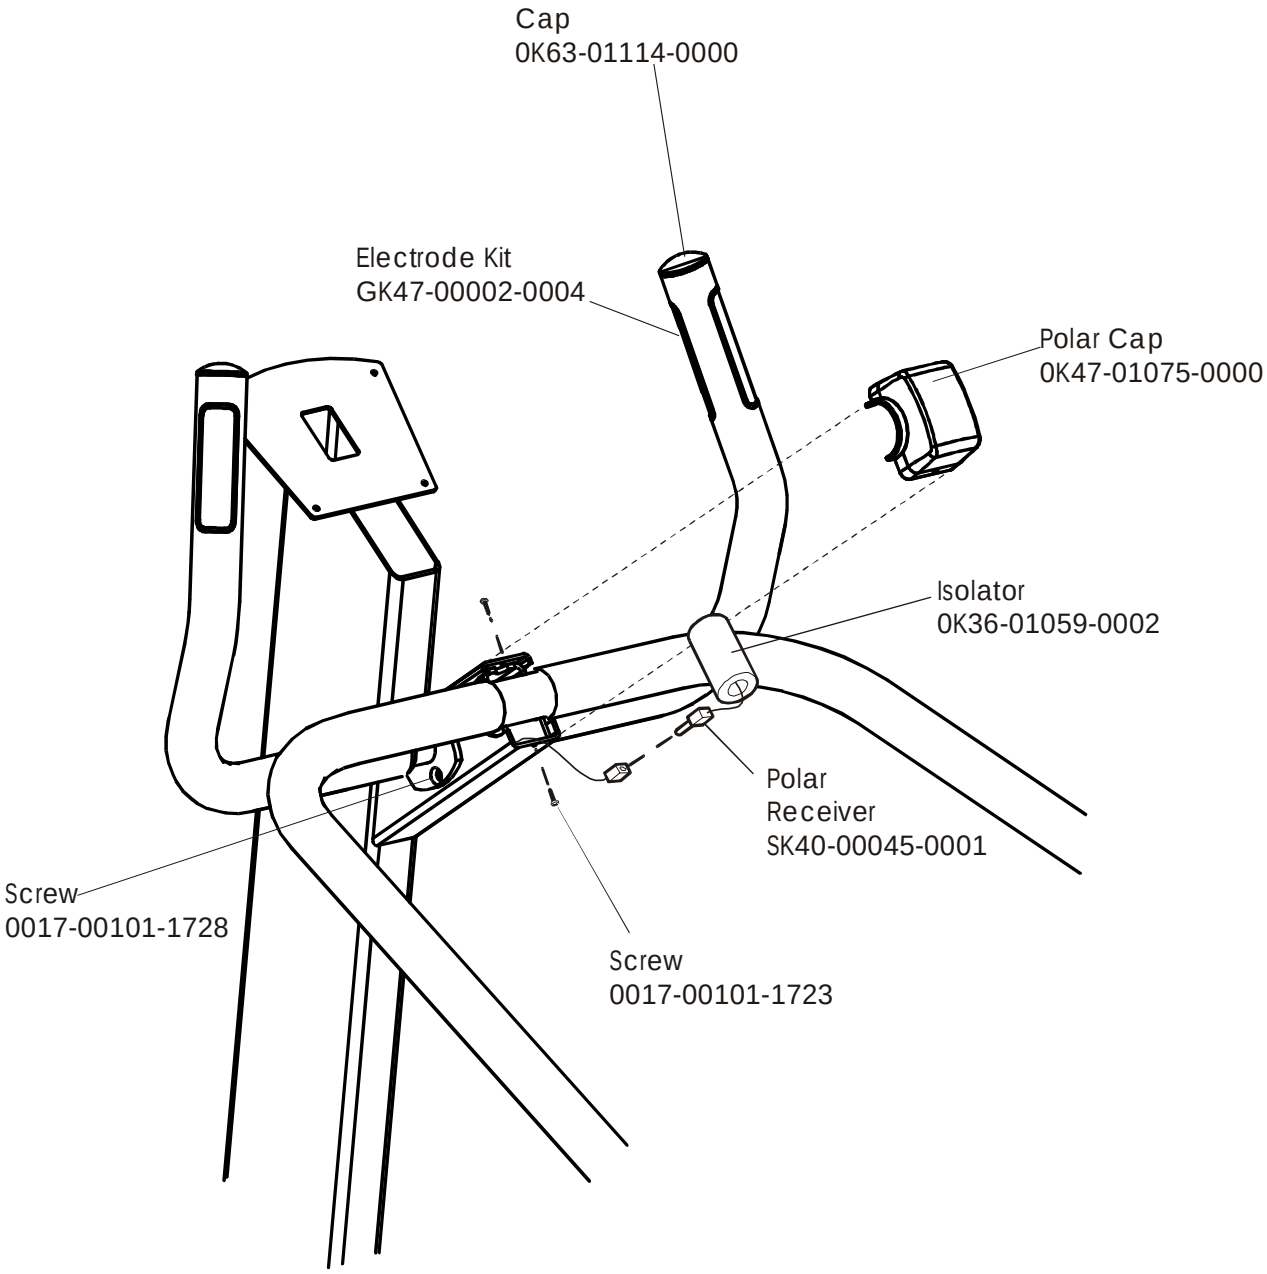
Cap
0K63-01114-0000
Electrode Kit
GK47-00002-0004
Polar Cap
0K47-01075-0000
Isolator
0K36-01059-0002
Polar
Receiver
SK40-00045-0001
Screw
0017-00101-1728
Screw
0017-00101-1723

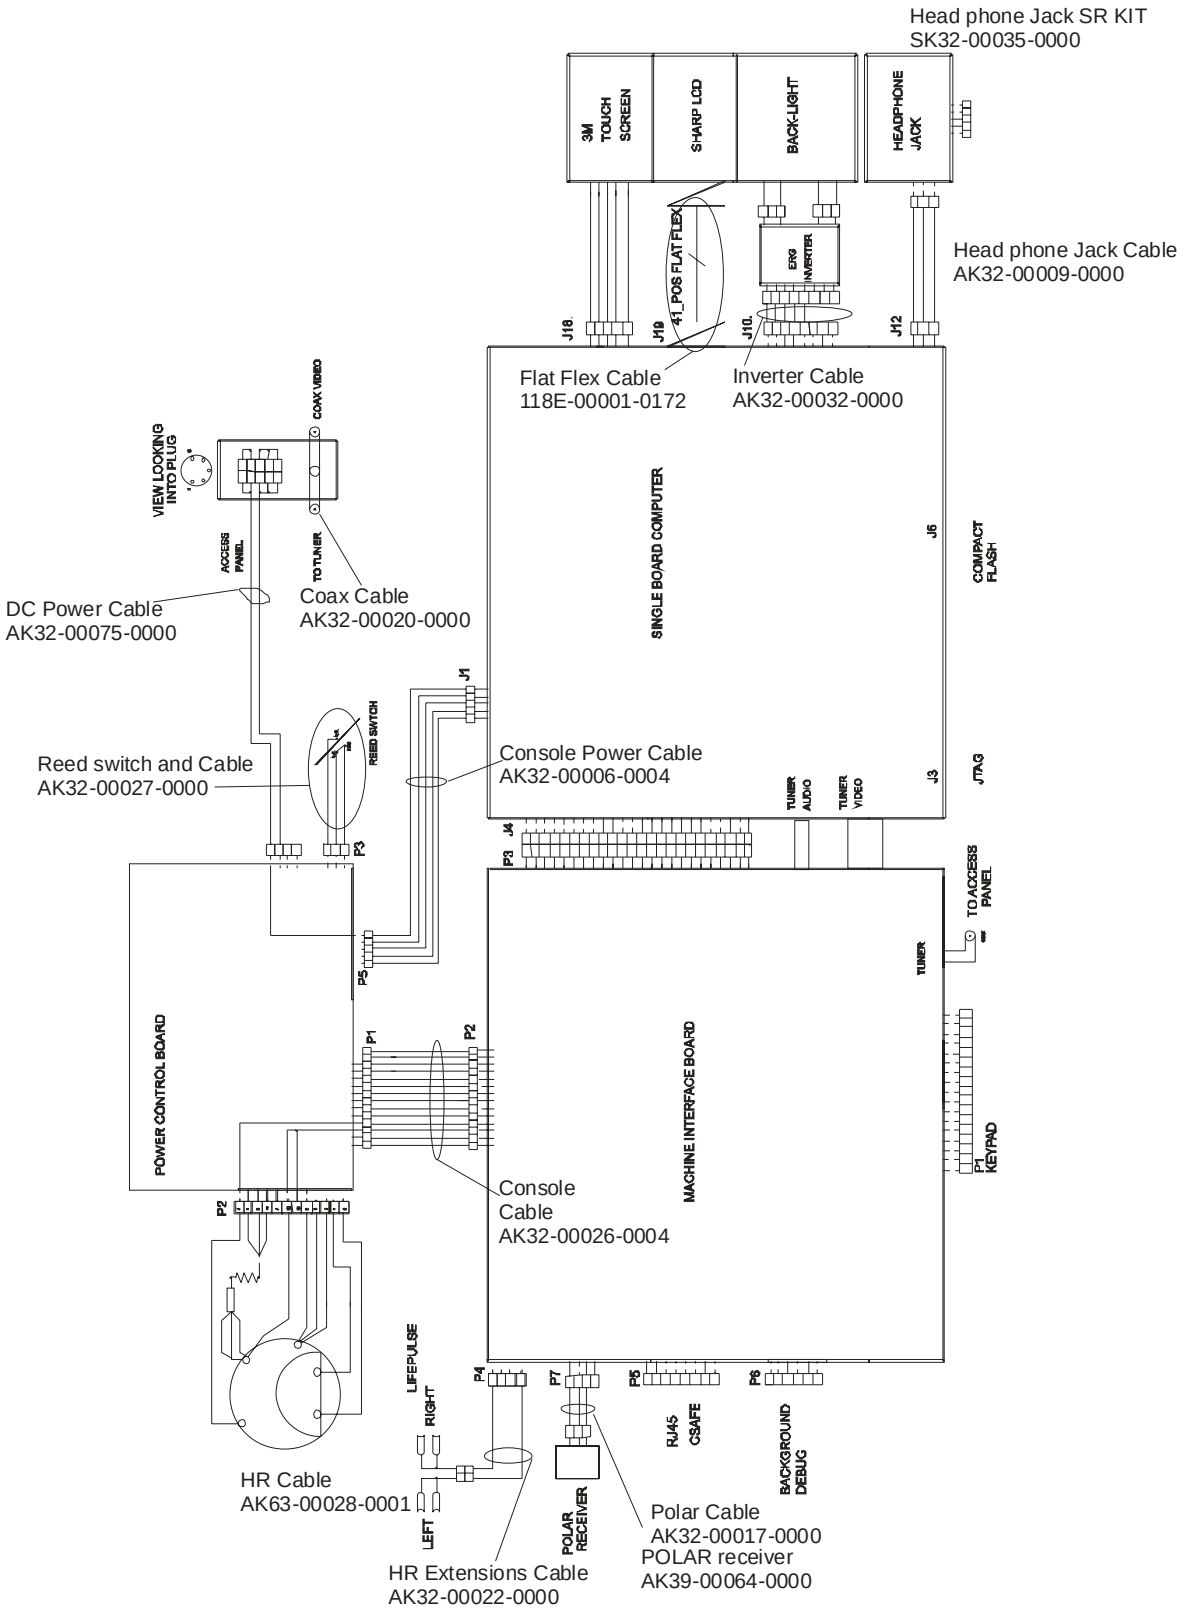
Head phone Jack SR KIT
SK32-00035-0000
3M TOUCH SCREEN
SHARP LCD
BACK-LIGHT
HEADPHONE JACK
ERG INVERTER
41_POS FLAT FLEX
Head phone Jack Cable
AK32-00009-0000
J10
J9
J11
J12
Flat Flex Cable
118E-00001-0172
Inverter Cable
AK32-00032-0000
SINGLE BOARD COMPUTER
J6
COMPACT FLASH
COAX VIDEO
VIEW LOOKING INTO PLUG
ACCESS PANEL
TO TUNER
DC Power Cable
AK32-00075-0000
Coax Cable
AK32-00020-0000
J1
REED SWITCH
Reed switch and Cable
AK32-00027-0000
Console Power Cable
AK32-00006-0004
TUNER AUDIO
TUNER VIDEO
J3
JTAG
J4
P3
P3
TO ACCESS PANEL
P5
TUNER
POWER CONTROL BOARD
P1
P2
MACHINE INTERFACE BOARD
P1 KEYPAD
Console
Cable
AK32-00026-0004
P2
LIFEPULSE
RIGHT
P4
P7
P5
P6
RJ45 CSAFE
BACKGROUND DEBUG
HR Cable
AK63-00028-0001
LEFT
POLAR RECEIVER
Polar Cable
AK32-00017-0000
POLAR receiver
AK39-00064-0000
HR Extensions Cable
AK32-00022-0000